




Nintendo Wii Remote Motherboard Replacement

Replace the motherboard in your Wii Remote

Written By: Emily

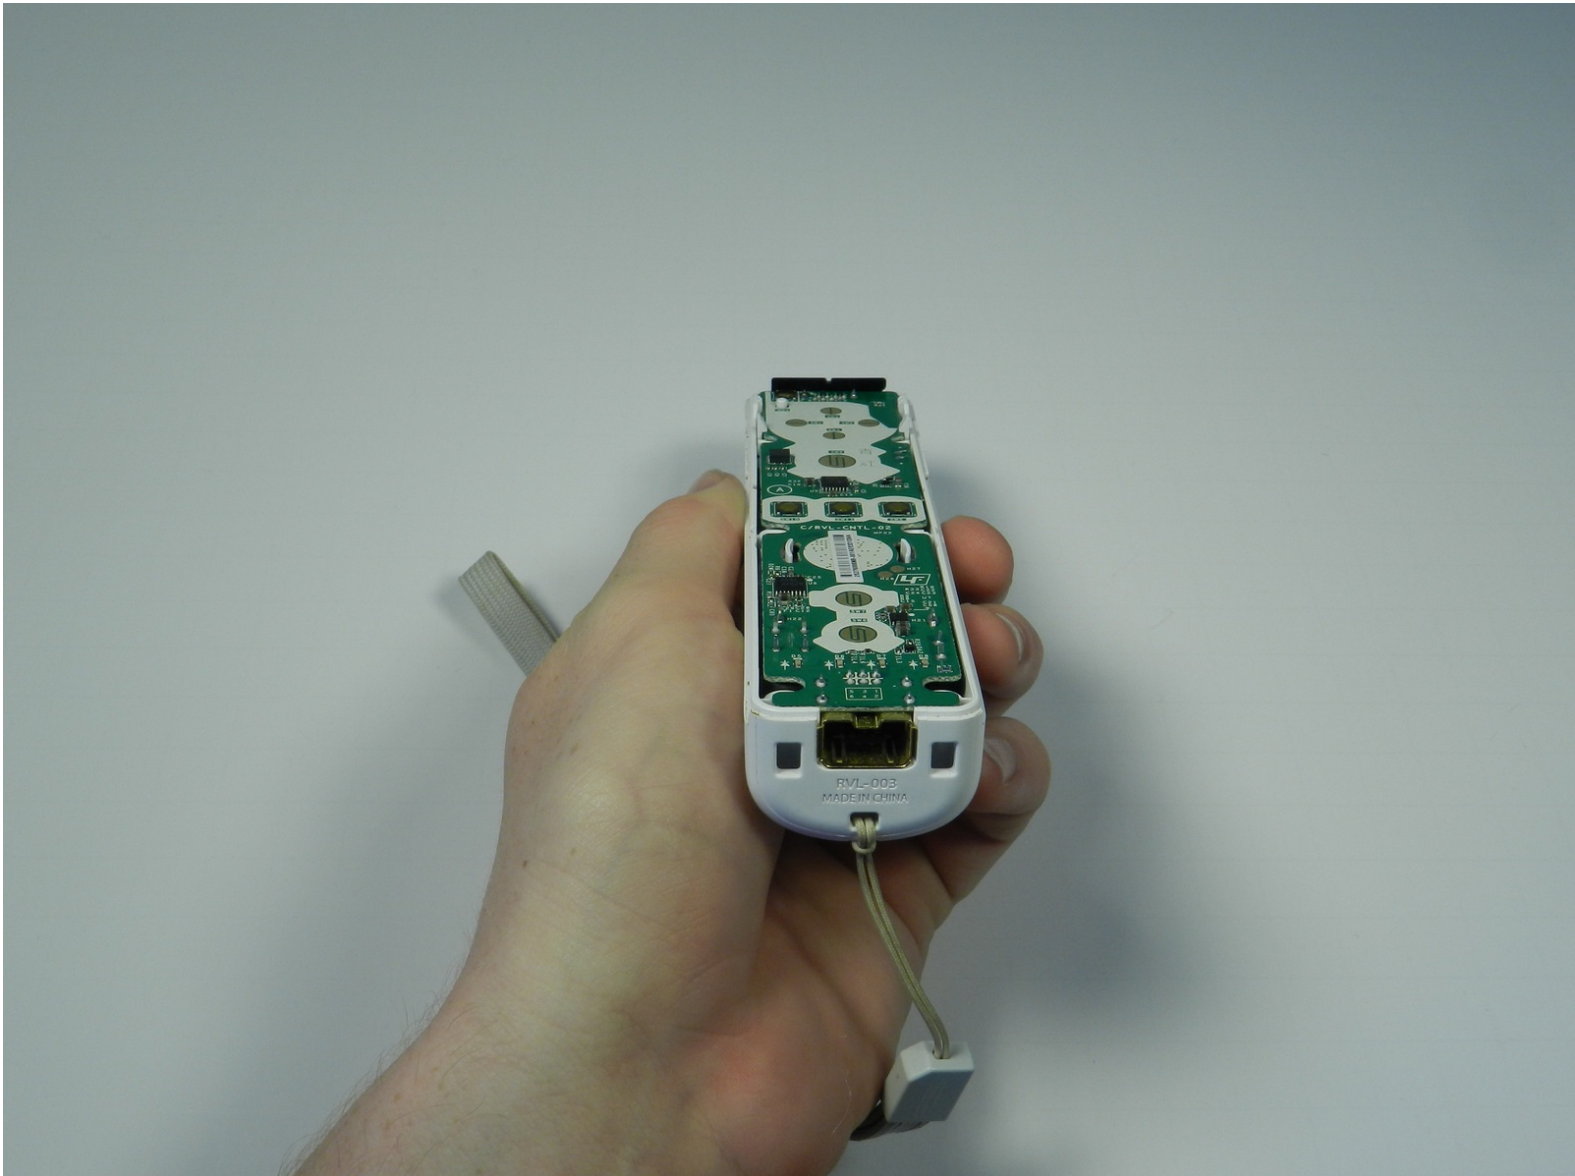

INTRODUCTION

Installing a Wii Remote motherboard requires the removal of the front cover plate and allows access to the B button.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Y1 Tri-wing Screwdriver](#) (1)
-

Step 1 — Front Cover Plate and Batteries



- Flip the Wii Remote over so the battery cover faces you.
- Push up on the bottom tab.
- Remove the battery cover.

Step 2




- Remove the first battery by pressing down on the positive end and pulling the battery out.
- Remove the second battery by pushing up on the positive end and pulling the battery out.

Step 3





- Using a Tri-wing Y1 Screwdriver, remove the two center 7mm screws by turning them counterclockwise.
- Repeat with the two bottom screws.

Step 4

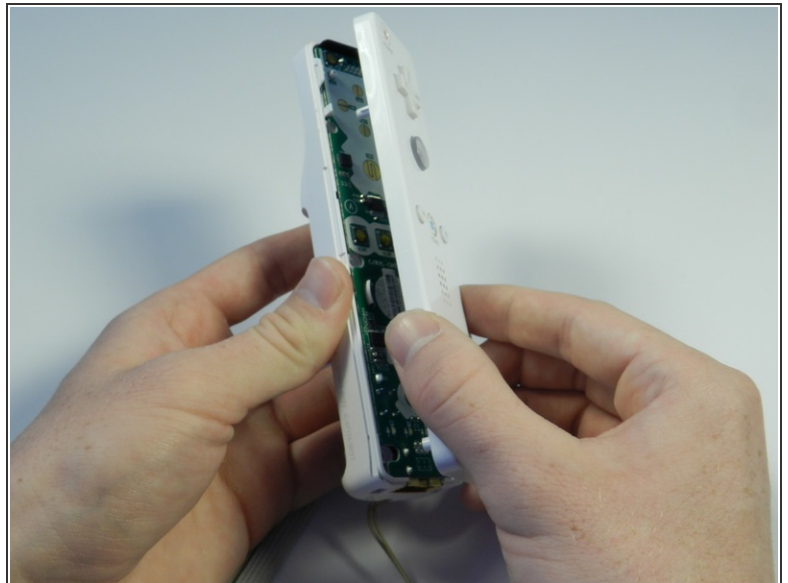


- With the flat end of a spudger, gently apply pressure to the tabs located on left side of the controller.
 - ⓘ These tabs are breakable. However, if the tabs are broken the controller will still function.
- Open the front plate like a book.
 - ⚠ Small parts may fall out as you open the front plate.



Step 5 — Motherboard

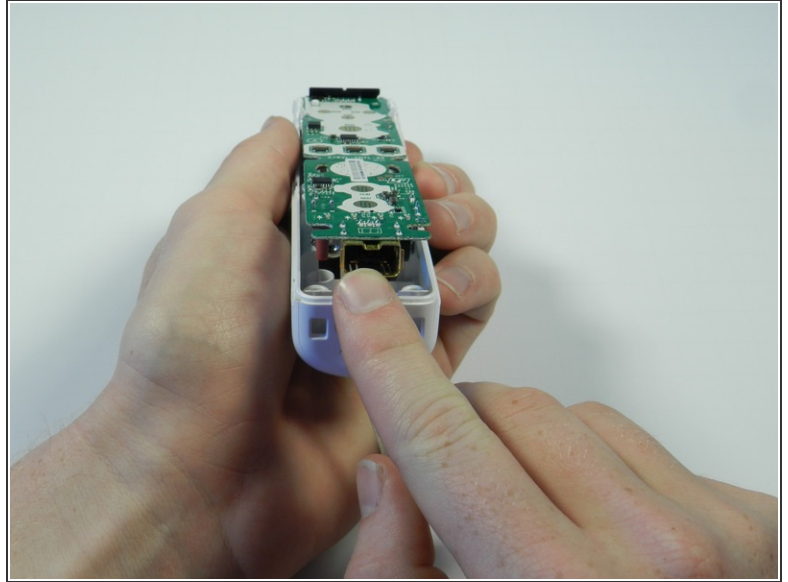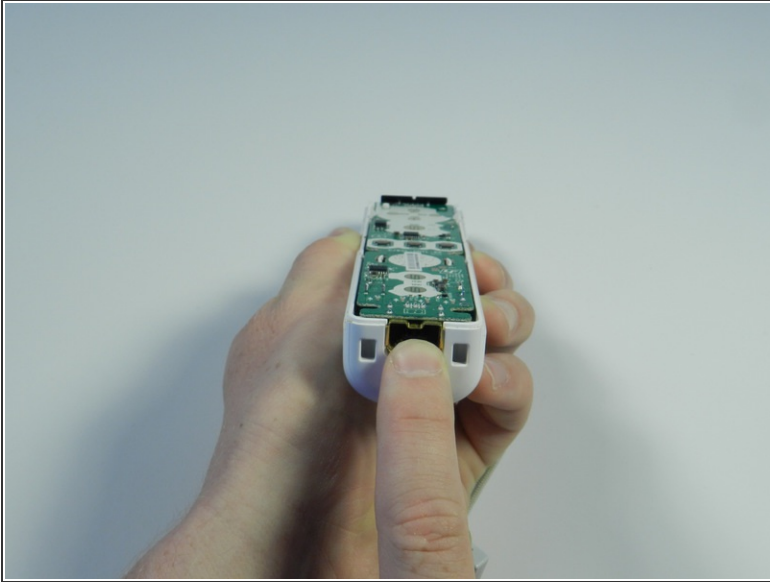

- Using the connector port, gently lift the motherboard about 2 cm from the base.

 Electrostatic discharge may damage the device. Be careful and avoid touching the electronic components as much as possible.

Step 6

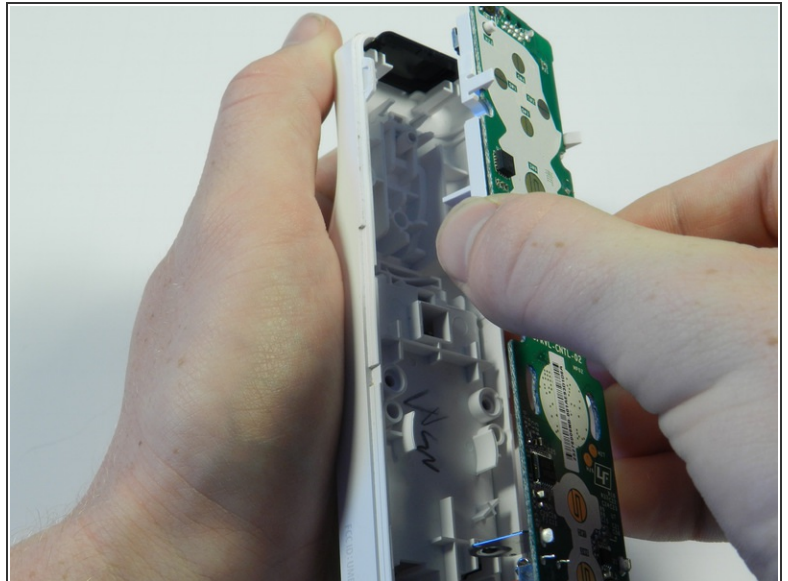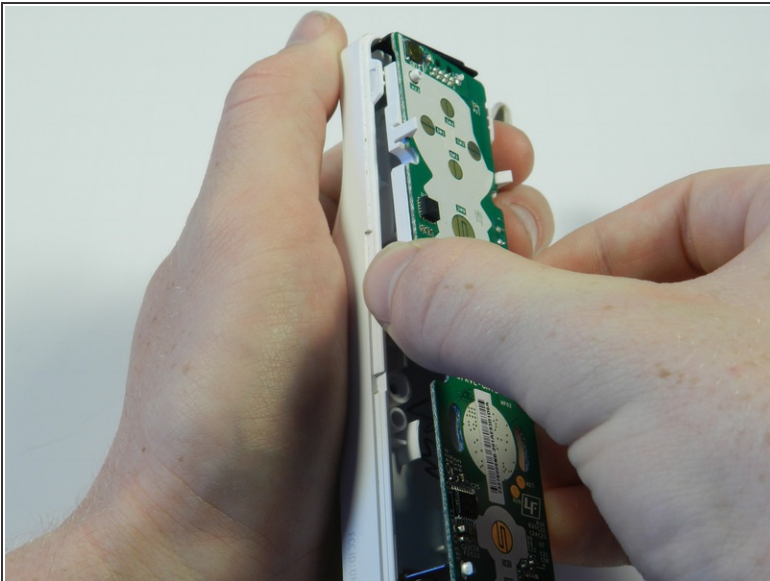

- Grasp the edges of the motherboard and pull it straight away from the case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:48:24 AM.